

- TIMING UP TO 30 MINUTES
- 44 MM STAINLESS STEEL CASE
- MIYOTA QUARTZ MOVEMENT
- MINERAL CRYSTAL
- ITALIAN LEATHER STRAP
- CHRONOGRAPH
- 24 H DISPLAY
- 10 ATM
- DATE

IMOLA 44 MANUAL

TIME AND DATE SETTING

1. Pull crown out to position 2.
2. Rotate crown clockwise until the previous day's date is shown in the date window.
3. Pull crown out to position 3.
4. Rotate crown clockwise until the correct date is shown in the date window.
5. Continue to rotate crown to set correct am/pm time.
NOTE: 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.
6. Return crown to position 1.
NOTE: When the crown is in position 2, do not press the pushers. Otherwise the chronograph hands will move.

NOTE: Do not set the date between 9:00 PM and 1:00 AM to ensure accuracy.

CHRONOGRAPH

1. Press A to start/stop the chronograph.
2. Press B to reset to zero.

CHRONOGRAPH ZERO RESET (INCL. AFTER REPLACING BATTERY)

This procedure should be performed when the **chronograph second hand does not return to zero position** after the chronograph has been reset, and including after the battery has been replaced.

1. If either of the chronograph hands is not at the zero (12:00) position, pull crown out to position 3.
2. Press A to move hands clockwise; press B to move hands counter-clockwise. Each press of A or B will move the chronograph hands by one increment/decrement. Or press and hold A or B for fast increment/decrement.
3. When both hands are in the zero position, reset time and return crown to position 1.

NOTE: Chronograph minute hand will synchronize with chronograph second hand during chronograph zero reset.



Remove the **plastic stopper** underneath the crown. Then push the crown back in to activate the battery.

PUSH in the CROWN properly before you expose your watch to moisture. Do **NOT** push the Reset or the Start/Stop Buttons underwater.