

IMOLA 36 MANUAL

HOW TO SET TIME AND DAY OF THE WEEK

- 1/ Pull the crown out to the 2nd click position when the second hand is at the 12 o'clock position.
- 2/ Turn the crown clockwise to advance the hour and minute hands until the day hand is set to the desired day of the week.
 - The day hand will not move back by turning the crown counterclockwise.
 - To advance the day hand quickly, turn back the hour and minute hands 4 to 5 hours beyond the point of the day change (between 11:00 p.m. and 4:00 a.m.), and then advance them again until the day hand is set to the next.
- 3/ Turn the crown to set the hour and minute hands.
 - Take a.m./p.m. into consideration when setting the hour and minute hands to the desired time.
 - The 24 hour hand moves correspondingly with the hour hand.
 - When setting the hour hand, check that the 24 hour hand is correctly set.
 - When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
- 4/ Push the crown back to the normal position.



Remove the **plastic stopper** underneath the crown. Then push the crown back in to activate the battery.

PUSH in the **CROWN** properly before you expose your watch to moisture. Do **NOT** pull out crown underwater.

HOW TO SET DATE

- 1/ Pull the crown out to the 1st click position.
- 2/ Turn the crown counterclockwise to set the date hand.
 - Do not set the date hand between 9:00 p.m. and 1:00 a.m.. Otherwise, they may not change properly.
 - The date hand will not move back by turning the crown clockwise.
- 3/ Push the crown back to the normal position.